




Kit contains: 1- brace 2- mount plates 4- screws

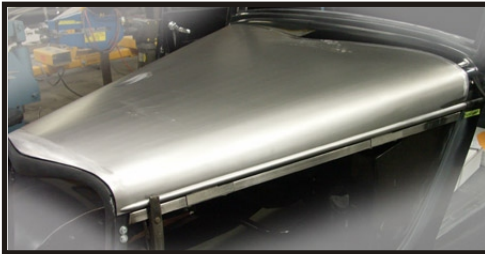

1. Hood must be installed with gaps and edges fit properly.



2. Place brace under hood and mark the position that it fits the best.




3. Position the mount plates, mark, drill, and countersink the holes.




4. The screw heads should be flush with the panel.



5. Place hood back on and position brace.

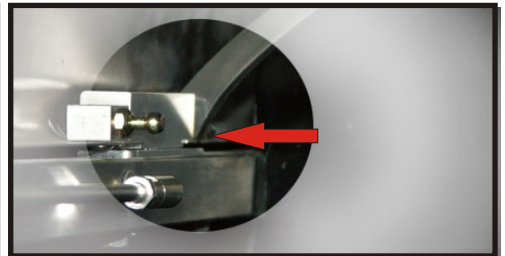

6. With everything aligned, tack weld the brace to the mount plates.

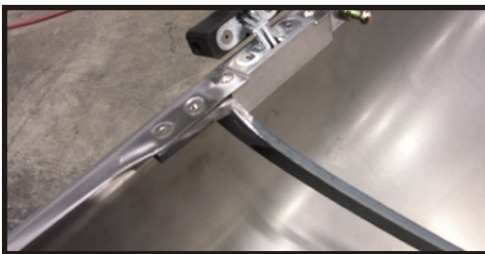

7. Carefully remove the hood and un-bolt the brace to complete the weld.



8. With the brace fully welded bolt it back in place.



9. Hood brace installed.