



Inside turnsignals for Hagan 7" Blue Dot and Snake Eye Lamps

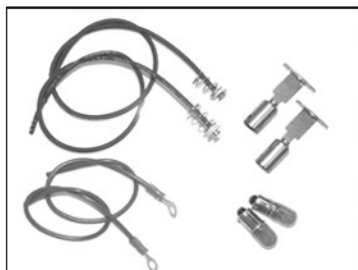


KIT INCLUDES:
2-SOCKETS
2-POWER LEADS
2-GROUND WIRES
2-AMBER BULBS



STEP 1 REMOVE BULB

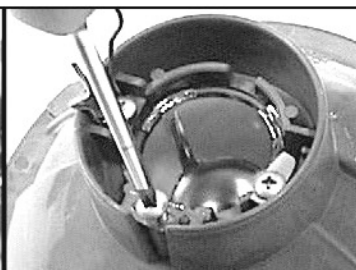

STEP 2 REMOVE THE BULB SHIELD SCREW.

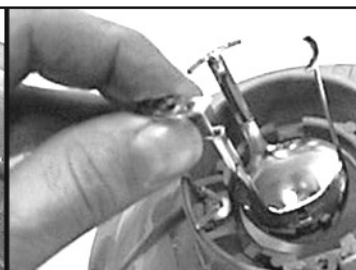

STEP 3 REMOVE BULB SHIELD.




STEP 4 INSTALL THE POWER LEAD WITH SPRING AND THE BULB. SNAKE THE WIRE ALONG THE SIDE AS SHOWN.



STEP 5 SLIP ASSEMBLY IN THE LAMP HOUSING. ROUTE THE WIRE TO THE LEFT.




STEP 6 SLIP BULB SHIELD BACK IN OVER THE TURN SIGNAL BRACKET.

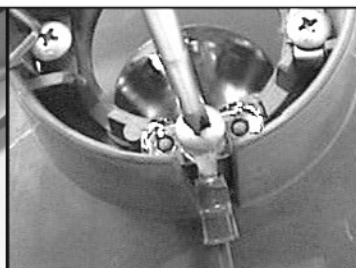

STEP 7 INSTALL THE GROUND LEAD WITH THE SHIELD SCREW.
NOTE: DO NOT OVER TIGHTEN THE SCREW AND MAKE SURE THE POWER LEAD IS NOT PINCHED!




STEP 8 CHECK THAT THE REFLECTOR IS SETTING PROPERLY.

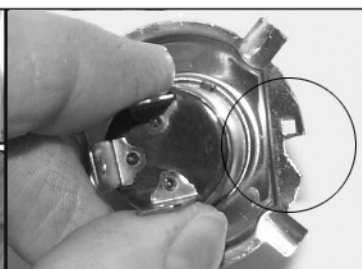


STEP 9 NOTCH THE BOTTOM EDGE OF THE BULB TO GIVE THE POWER LEAD CLEARANCE.



STEP 10 INSERT THE BULB, MAKE SURE IT IS PROPERLY SEATED.

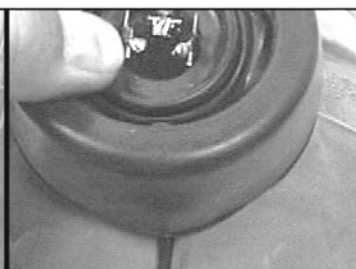

STEP 11 INSTALL RUBBER SEAL.

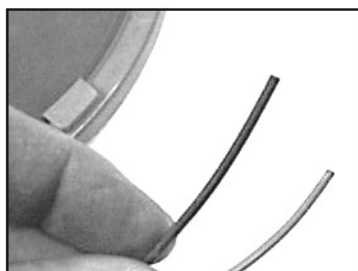

STEP 12 CONNECT THE GREEN WIRE TO A PROPER GROUND AND THE BLACK WIRE TO THE TURN SIGNAL POWER SOURCE.

Hagan Street Rods
721 W. Monroe St.
New Bremen, Ohio 45869
haganauto.com
haganstreetrods@yahoo.com
419-629-1969