




**READ COMPLETELY AND UNDERSTAND BEFORE YOU BEGIN!  
A POOR PATTERN COULD DELAY YOUR HOOD 3 MONTHS!**

**'33-'34 Hood Pattern Instructions**

Use 30 lb. kraft paper or masking paper to make pattern. Do not use poster board. This is how your pattern MUST look before you send it to us. DO NOT GET CREATIVE! Only mark (and label the marks) exactly as shown below. Mark the top side of pattern. Be sure to write your name, address and phone number directly on the pattern. If you need to add length, add to the front. If you need to add to the width, add to one side only, and DO NOT OVER LAP PAPER!

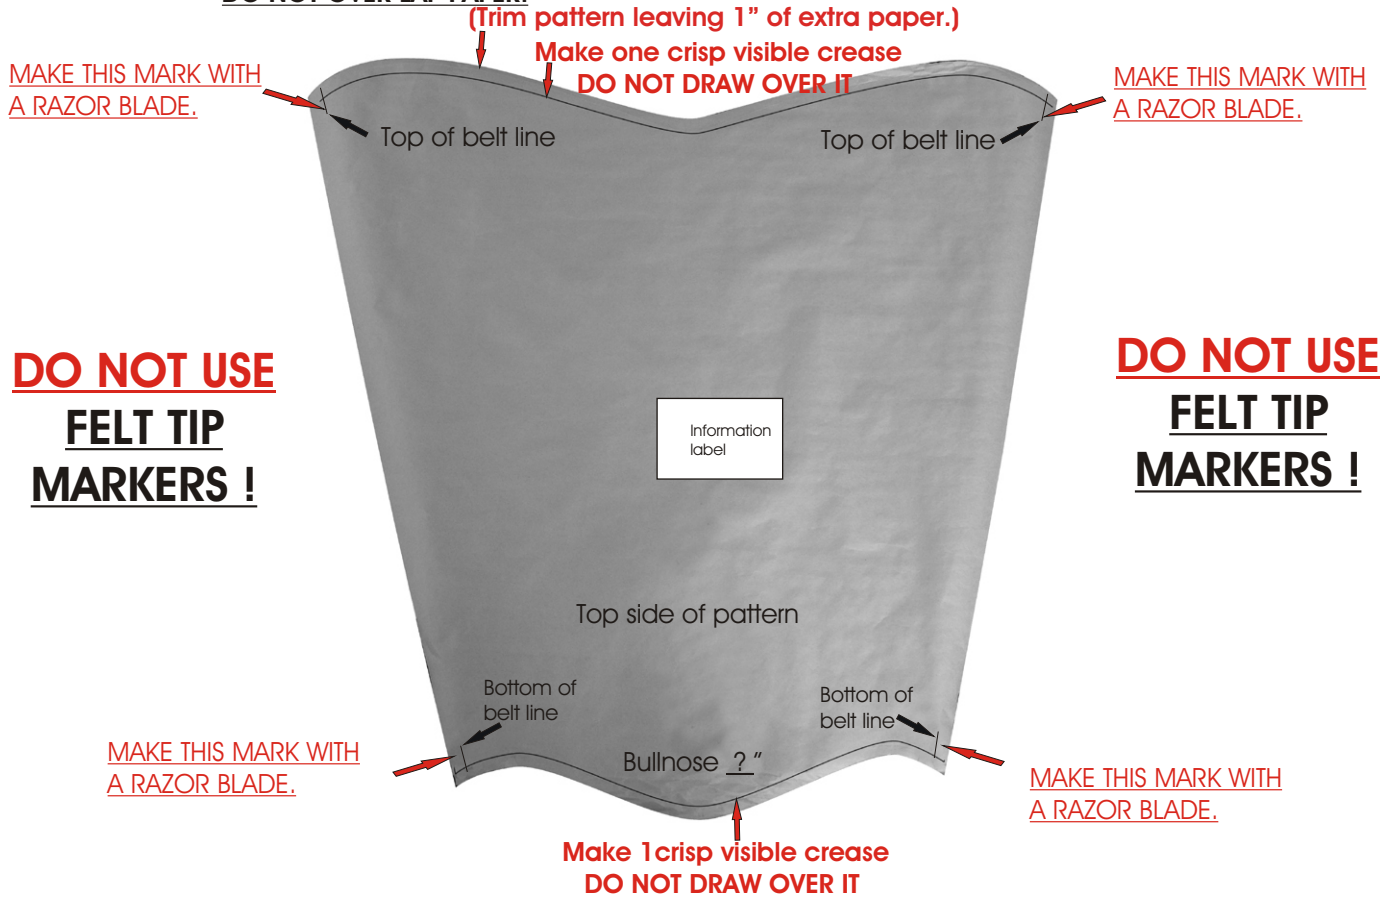


**DO NOT USE FELT TIP MARKERS !**


**DO NOT USE FELT TIP MARKERS !**




1 With the grill positioned run tape along the bottom of the belt line of the cowl to the grill. **Note:** the top of the tape represents the bottom of the hood.

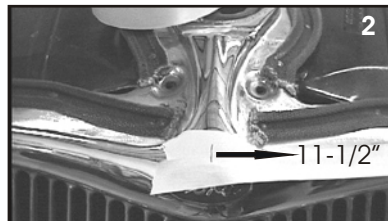

2 An original hood measured 11-1/2" from the center of the grill to the bottom of the hood. This measurement is for your reference only.

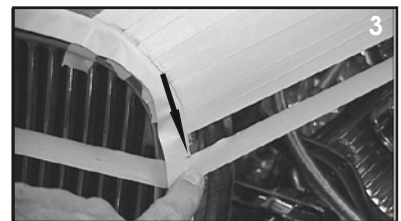

3 Look down the tape line to set the position at the grill. Then step back and take a look. Adjust as needed.

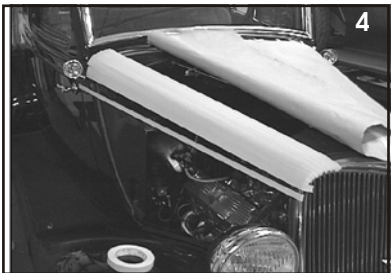

4 **Here is a helpful trick:** You can run layers of 3/4" tape between the cowl and the grill to mock up the curved part of the hood. This will help support the paper.



5 YOU MUST start at the center and work your way to the sides. Pull paper tight and anchor it down the center.



6 Now Trim away the excess paper leaving a few inches all the way around.