




Begin taping the paper at the center. Pull tight and anchor every few inches.

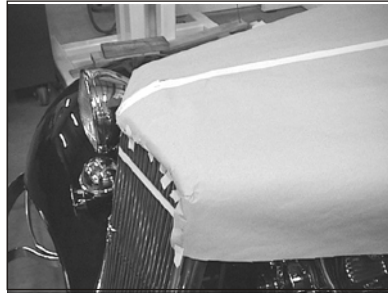

The paper must be stretched tight as a drum and it should look like there is a hood underneath.

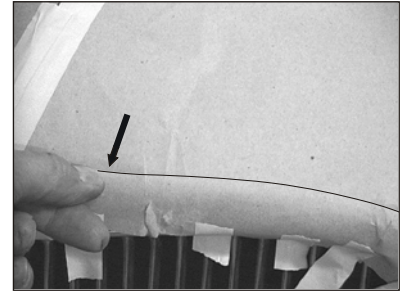


Now you must crease the paper on the edge of the grill and cowl with your thumb nail. **Make one fine line.** Try not to cut the paper

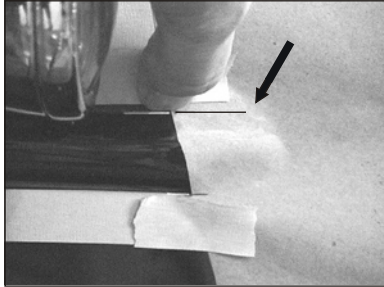

Make sure the paper is held down tight and mark the **TOP** of the belt line at the cowl with a **razor blade cut about 1/2"** and mark with an **arrow** .



Mark the **BOTTOM** of the hood at the **FRONT**. **Again with a razor and high light with an arrow.**

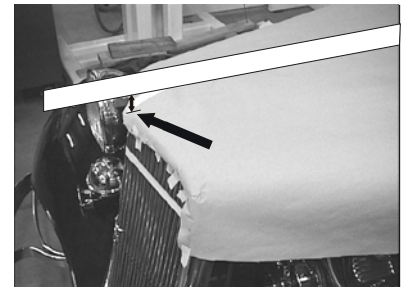

*Some 33 hoods will need to be bullnosed. If so measure the following. Hold a straight edge along the top of the paper hood. Measure the gap between the straight edge and the **top center of the grill**. Write this measurement on the top front of the pattern.



Place the "**info label**" on your pattern. Fill out the information.

BEFORE YOU SEND IN YOUR PATTERN:

***CHECK IT OVER. DOES IT HAVE ALL THE MARKS SHOWN ON PAGE ONE?**

*** IS YOUR NAME ADDRESS AND PHONE NUMBER ON IT?**

***HAVE YOU PLACED YOUR ORDER TO SECURE YOUR PLACE IN LINE? CUSTOM HOODS ARE PROCESSED EVERY 3 MONTHS. CALL US FOR THE CURRENT BUILD SCHEDULE.**

Hagan Street Rods
 721 W. Monroe St.
 New Bremen, Ohio 45869
 1-888-464-2426
 1-419-629-1969